



**I : Inspection \*I : Audible check L : Lubrication R : Replace or change**

Items	Service Intervals (Odometer reading or months, whichever occurs first)															
	Months	12	24	36	48	60	72	84	96	108	120	132	144	156	168	
	Odometer Reading × 1000 km	15	30	45	60	75	90	105	120	135	150	165	180	195	210	
<b>OPERATIONS INSIDE THE VEHICLE</b>																
Check brake pedal and clutch pedal for free play		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check parking brake lever stroke and play		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Replace air purifier filter	Normal usage	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
	Severe usage	R : More frequently														
Check operation of all functions and lights		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
<b>OPERATIONS OUTSIDE THE VEHICLE</b>																
Check wheel alignment			I		I		I		I		I		I		I	
Check tyre pressures		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check front and rear wheel bearings for play					I				I				I			
Check brake hoses and pipes for leakage		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check brake pads and discs for wear	Normal usage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
	Severe usage	I : Every 7,500km or every 6 months														
Check brake shoe linings and drums (drum in disc) for wear	Normal usage		I		I		I		I		I		I		I	
	Severe usage	I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Check fuel hoses and pipes for leakage or deterioration			I		I		I		I		I		I		I	
<b>OPERATIONS AFTER ENGINE IS WARMED UP</b>																
Check automatic transmission for fluid leakage (In case of leakage, check fluid level)		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Replace automatic transmission oil	Normal usage	R : Every 195,000km														
	Severe usage	R : Every 90,000km														
Change engine oil	Normal usage	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
	Severe usage	R : Every 7,500km														
Replace engine oil filter	Normal usage	R	R	R	R	R	R	R	R	R	R	R	R	R	R	R
	Severe usage	R : Every 7,500km														
Check exhaust gas recirculation (EGR) system (petrol-powered vehicles)		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
<b>OTHERS</b>																
Check body condition for damage		I : Every year														
Check the common rail engine (small injection quantity learning)		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Reset maintenance service interval reminder		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I
Road test		I	I	I	I	I	I	I	I	I	I	I	I	I	I	I

**NOTE:**

\*1 : If excessive valve noise is evident, check the valve clearance.

"Severe usage" specifications apply to only vehicles used under severe operating conditions.

Severe operating conditions include the following cases :

- (1) Driving in a dusty area or in an area in which the vehicle is likely to be exposed to salty air or brine.
- (2) Driving on rough roads, on submerged roads, or hilly areas.
- (3) Driving in cold zones.
- (4) Engine idling for a long time or short-distance travel during cold weather.
- (5) Frequent, sudden application of brakes.
- (6) Towing of a trailer.

(7) Use as a taxi or rental car.

(8) More than 50% of operation time in heavy city traffic, or temperatures at, or above 32°C

(9) More than 50% of operation time at speeds of 120km/h or higher in hot temperatures of 30°C or higher.

(10) Operation under excessive load.